



# AT6400 AllTouch IR Universal Remote Control

## User Guide

### Welcome to the Ultimate Control Experience

Your new AT6400 AllTouch® Infrared (IR) Universal Remote Control (remote) is a true universal remote, functioning as four remotes in one. As one example, you can use this remote to operate your set-top, your TV, and two other devices, such as a DVD player and VCR.

### Important Information About Your Remote

Your remote is initially programmed to only operate your set-top. Therefore, you must program the remote to operate your TV, VCR, or other devices. See **Program the Remote to Control My Devices** to learn how to enter device codes and program your remote.

**Note:** You must use the IR remote within line of sight of the set-top to operate the set-top correctly.

### How Does A Universal Remote Control Work?

You tell the remote which type of device you want to operate using the four keys arched across the top of the remote. These keys, known as **mode keys**, are labeled **STB**, **TV**, **DVD**, and **AUX**. Each mode key is associated with a specific device. As an example, after programming the remote, if you want the remote to operate your TV, you simply press the TV key. Other keys you press on the remote, thereafter, should operate your TV. Want to switch the remote to operate a different device? Just press the mode key for the next device you want to operate. In this guide, you will learn which types of devices you can control and how to program the remote to control your specific devices.

### Where Do I Start?

Before you begin using your remote, complete the following initial setup tasks.

### Install the Batteries

The remote requires two AA batteries (alkaline recommended). A diagram in the battery compartment of the remote indicates proper placement of the batteries. When batteries are properly installed, the light on the remote blinks each time a key is pressed.

### Visit the Quick Reference Section

Use the Quick Reference section of this guide to familiarize yourself with the remote and the functions of its various keys. Knowing the function and location of the keys on the remote will assist you when you are programming the remote.

### Program the Remote

To learn how to program your remote, refer to the sections **What Devices Can I Control**, **What Devices Do I Want to Control**, and **Program the Remote to Control My Devices** for further instructions.

### Find a Place to Store Your Remote

Keeping up with one remote is much easier than keeping up with four or five remotes. However, it is still a good idea to find a storage location for your remote. The AT6400 is not a toy. It should be kept out of the reach of children under the age of 6 years.

### Program the Remote to Control My Devices

Your remote is initially programmed to only operate your set-top. You will need to set up the remote to operate your other devices using its TV, DVD, and AUX modes. The TV key may be programmed to operate a standard or high-definition television (HDTV). The DVD key may be programmed to operate a DVD player. The AUX key may be programmed to operate a VCR, a receiver, an amplifier, or a Home Theater in a Box (HTIB) system. If the remote provides only limited functionality for a device, you can look for a code that provides more functionality.

Refer to the code tables at the end of this guide to locate additional programming codes.

**Note:** You have the option to assign some remote keys to operate one device type only. For example, you may want to assign volume control to the TV only. If this is the case, you can reprogram power, volume, and channel control using procedures found later in this guide.

### Assigning a Device Code to a Mode Key

1. Refer to the code tables at the end of this guide to locate the information for the device you want to program.

**Note:** If your device is not listed, you may be able to program the remote using the Auto-Search function. Go to **What If None of the Codes Work** for instructions.

2. Turn on the device that you want to assign to a mode key.

3. Press and hold the appropriate mode key (**TV**, **DVD**, or **AUX**) on the remote, and then press and hold the **OK** key.

4. Release *both* keys and the mode keys blink twice.

5. Enter the first 4-digit setup code for the device using the numeric keys (0-9) on the remote. The mode key blinks three times to indicate that the code entry was accepted.

#### Notes:

- When an invalid code is entered, the selected mode key displays a long flash to indicate that you have not entered the code correctly.

- Should the remote time-out before you complete the code setup, you must start over. This is indicated by one long flash of the red LED.

6. Point the remote at the device, and press **POWER** to test the device.

7. Did the device power off?


- If **yes**, write this code number in the table found in this guide. You may need it again if the device code is accidentally erased.

- If **no**, repeat this procedure from step 3 using a different setup code.

**Note:** If none of the codes listed for your brand of device operate the device correctly, go to **What If None of the Codes Work** for instructions.

8. Repeat this procedure for each mode key you want to program.

### Quick Reference

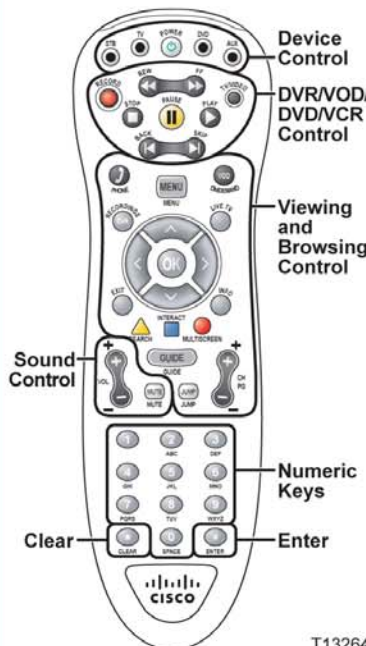

### Device Control

- POWER** Turns devices on or off
- STB** Enables set-top mode functions
- TV** Enables TV mode functions
- DVD** Enables DVD mode functions
- AUX** Enables AUX mode functions

### DVR, VOD, DVD, VCR Control

**Notes:**

- In STB mode, these keys control DVR and VOD functions.
- In DVD and AUX modes, these keys may control your DVD or VCR depending on how you have programmed the remote.

- RECORD** Records the selected program
- STOP** Stops DVD, VCR, VOD, or DVR content
- PAUSE** Pauses DVD, VCR, VOD, or DVR content
- PLAY** Plays DVD, VCR, VOD, or DVR content
- INPUT** Scrolls through available TV or video input sources
- REW** / **FF** Rewinds or fast forwards through DVR or VOD content
- BACK** / **SKIP** Skips backward or forward through DVR or VOD content

T13264